



# Owner's manual

## ***anlen*** **E-SCOOTER**

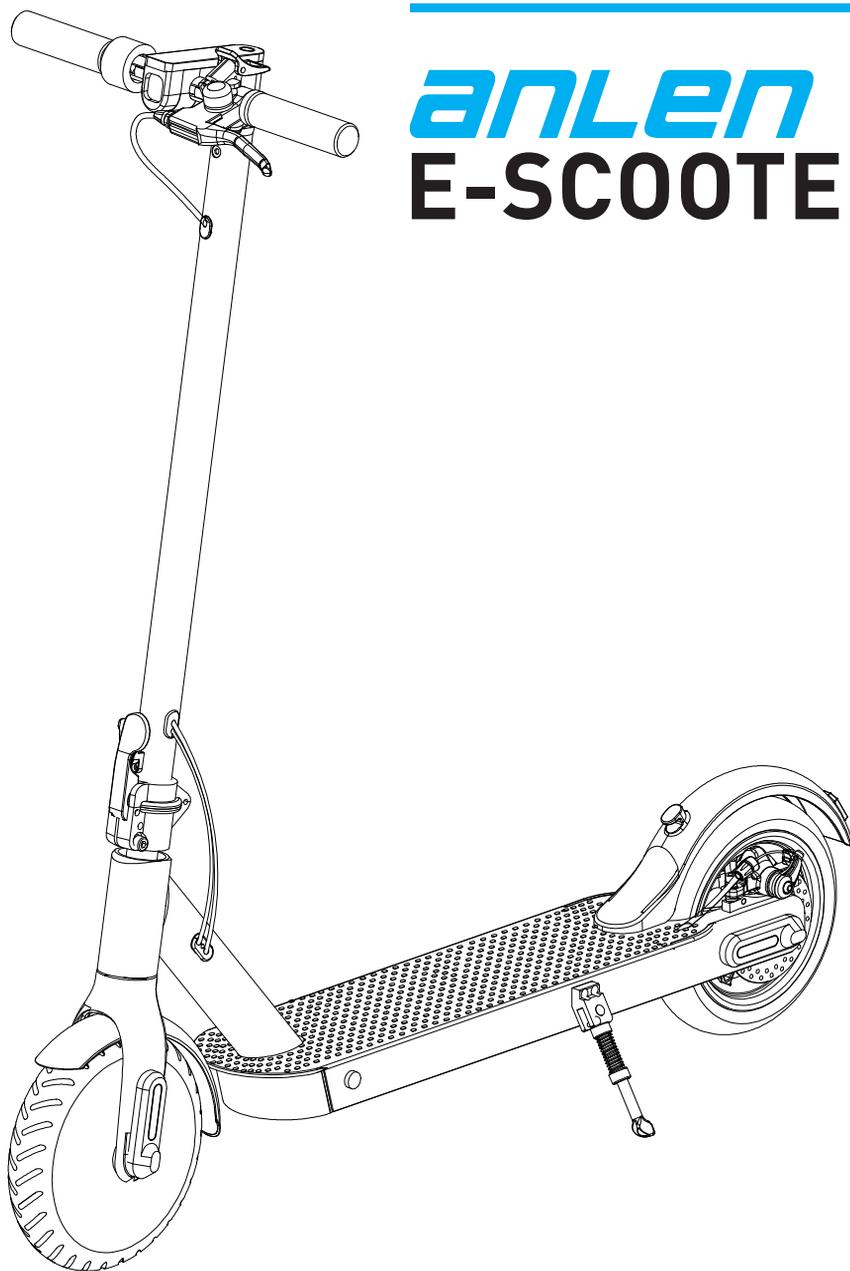

**EN**


# 1. Package content

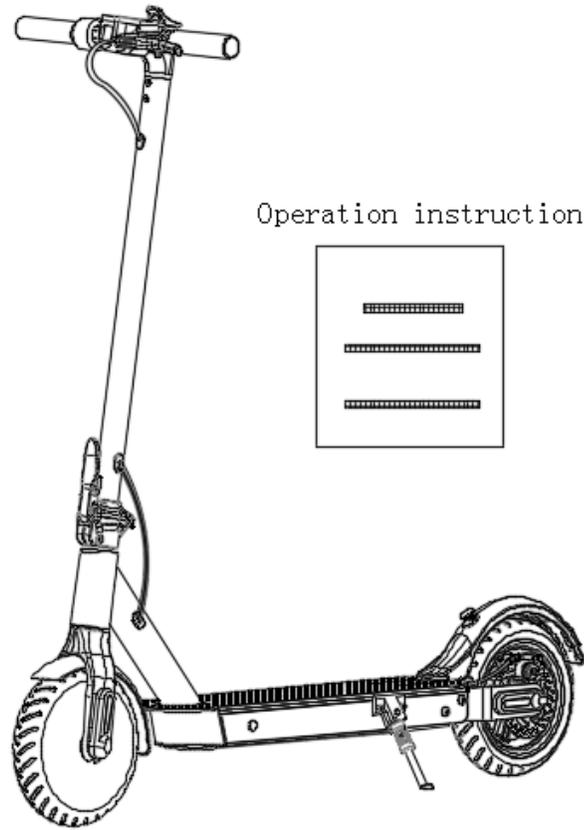

Screw x4



Hexagon Wrench

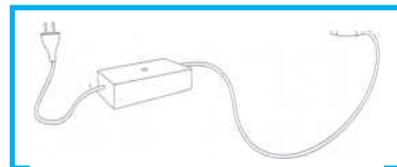


Charging adapter

Carefully check the package content. If anything is missing or damaged, please contact your local customer service for support.


# 2. Technical data

<b>Dimensions (length/width/height)</b>	1080*430*1140mm unfolded/490mm folded
<b>Weight</b>	12.7KG
<b>Max. vehicle payload (rider + luggage)</b>	100KG
<b>Max. speed</b>	20KM/H
<b>Range (km)</b>	15-18KM (measured at 25°/15km/h/65kg payload)
<b>Applicable terrain</b>	Flat road
<b>Rated Voltage (VDC)</b>	36V
<b>Max charging voltage (VDC)</b>	42V
<b>Charging Rated current (A)</b>	1.5A
<b>Charging time</b>	5-6H
<b>Rated power (W)</b>	250
<b>Max power</b>	500W


### 3. Product overview

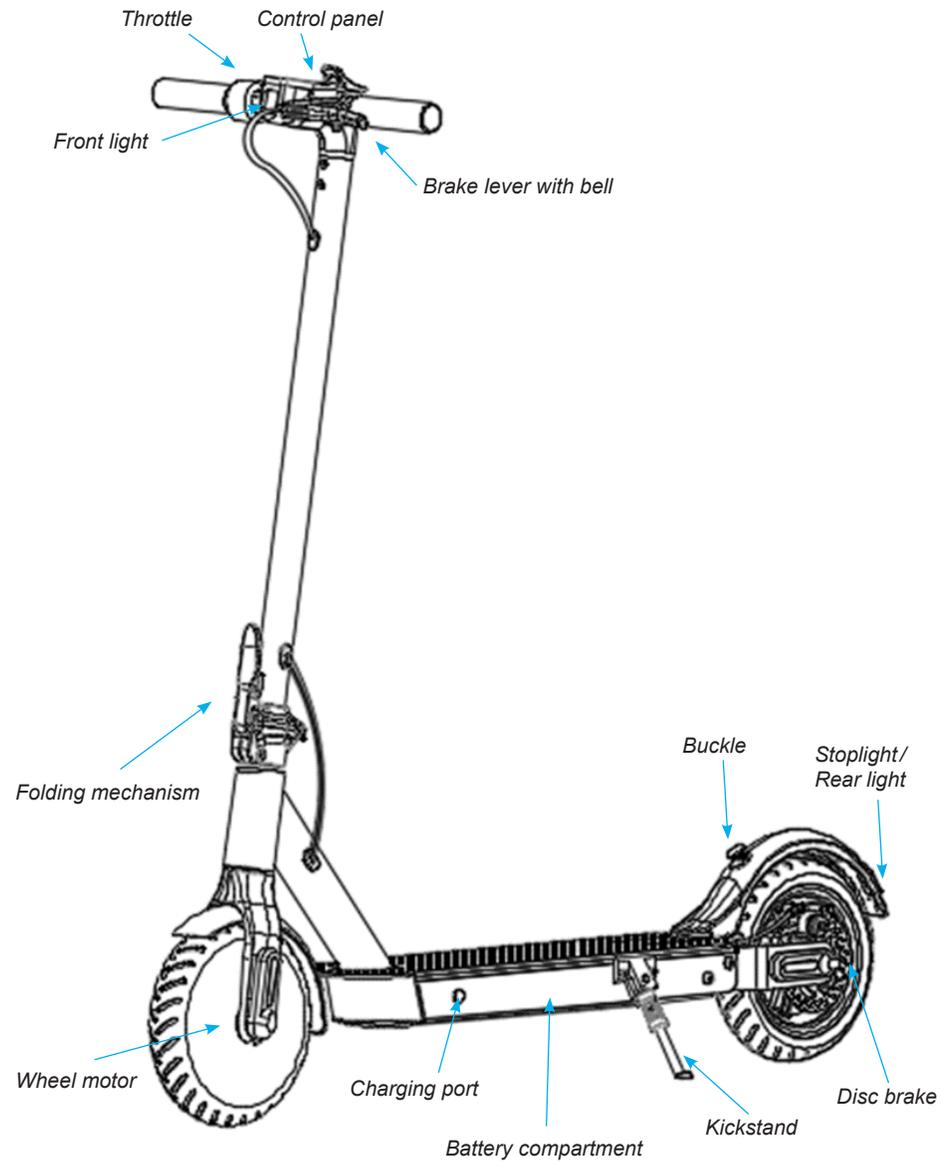


### 4. Assembly & Setup

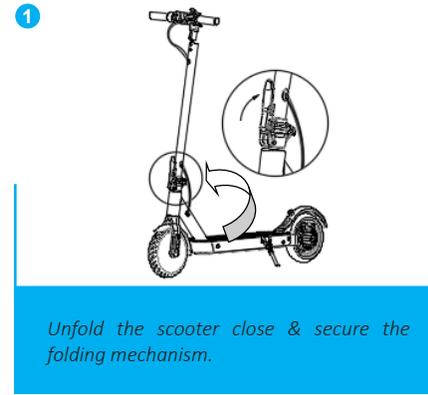

#### Charger connection

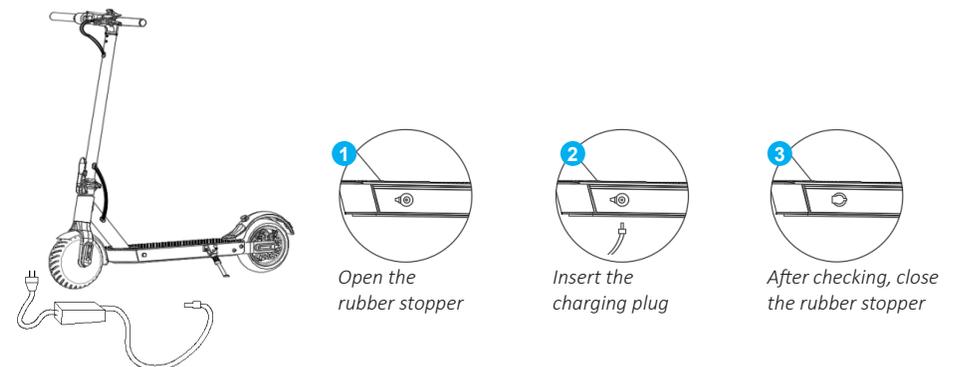


## 5. The control panel

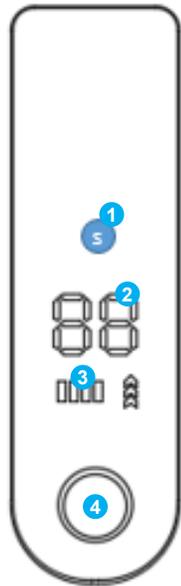

<b>Mode indicator</b> <span style="color: blue;">1</span>	Low-speed modus (green light) High-speed modus (red light)
<b>Speed display</b> <span style="color: blue;">2</span>	Showing current speed while riding. When low speed mode is selected, the max speed is 12km/h. When high speed mode is selected, the max speed is 20km/h.
<b>Battery indicator</b> <span style="color: blue;">3</span>	There are four electric lights to indicate the charging condition of the battery.  When 4 lights are on, the capacity is between 100% - 75%;  When 3 lights are on, the capacity is between 74% - 50%.  When 2 lights are on, the capacity is between 49% - 25%.  When 1 light is on, the capacity is between 24% - 00%.  When the light is flashing, the battery is almost empty. Please recharge as soon as possible.  When the battery is empty, the four lights are off, and the scooter will slide to the natural stop by inertia, please recharge the scooter before using.
<b>Power button</b> <span style="color: blue;">4</span>	Press the button 1x to activate the Scooter.  When the scooter is activated, another short press will turn the light on / off.  When the scooter is activated, double-click will switch from low-speed mode to high-speed mode.  Press the button for 2 seconds to switch the scooter off.

## 6. How To Ride

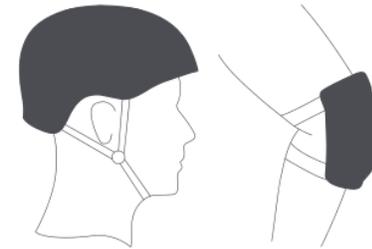


*Wear helmet and knee pads while riding the Scooter*




1 *Check the battery status and the brakes before each ride.*




2 *Step on the deck with one foot, and slowly kick off the other on the ground.*

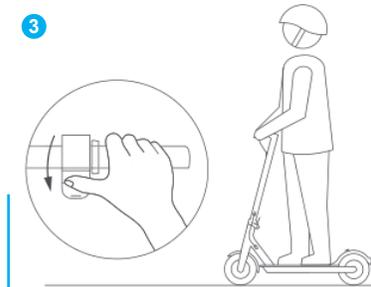

3 *When the scooter starts to move, put both feet on the deck and press the accelerator (the accelerator initiates once the speed exceeds 5km/h)  
Turn on the power and check the power indicator*

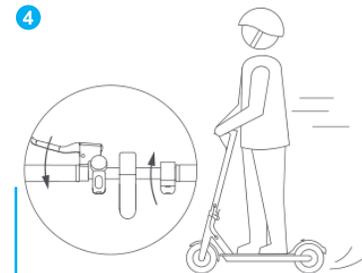

4 *Release the throttle to stop acceleration. Energy recovery system automatically initiates to help slowing down. Use the brake lever to stop.*

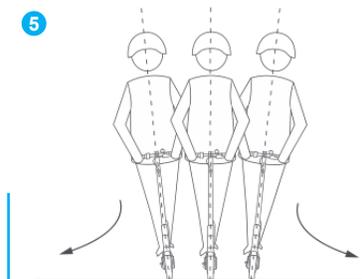


5 *Tilt your body to the steering direction as you turn*

## 7. Safety Reminder

- When you use this vehicle for the first time, please ride it in a safe environment without obstacles or traffic. Please get familiar with the vehicle before you use it in public places.
- This electric scooter is a leisure device. But once used in a public area, they'll be seen as vehicles, subjecting to any risks faced by vehicles. For your safety, please follow instructions in the manual and traffic laws and regulations set forth by government and regulatory agencies.
- At the same time, you should understand that risks cannot be entirely avoided as others may violate traffic regulations and drive incautiously, and you're exposed to road accidents just as when you're walking or cycling. The faster the scooter is, the longer it takes to stop. On a smooth surface, the scooter may slip, lose balance, and even result in a fall. Thus it is crucial that you use caution, keep proper speed and distance, especially so when you're unfamiliar with the place.
- Respect pedestrians right of way. Try not to startle them while driving, especially children. When you ride from behind pedestrians, ring your bell to give them a heads-up and slow your scooter to pass from their left (applicable to countries where vehicles drive on the right). When you ride across pedestrians, keep to the right at a low speed.
- Closely follow the safety instructions in the manual especially in countries without relevant laws and regulations for electric scooters.
- Do not lend your scooter to persons who don't know how to use it.
- Check the scooter before every use. When you note loosen parts, low battery alerts, flat tires, excessive wear, strange sounds, malfunctions and other abnormal conditions, stop riding immediately and call for professional support.

## 8. Folding and Carrying

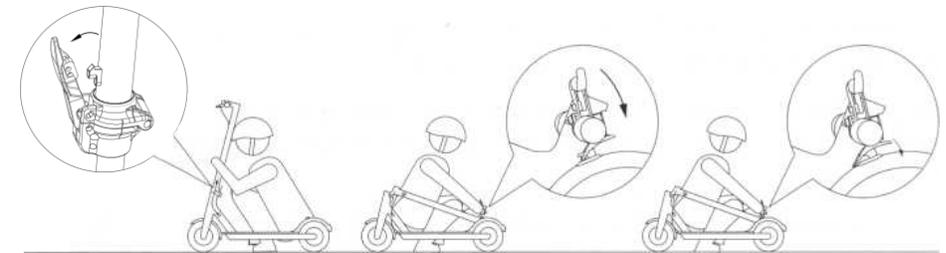

Make sure that the scooter's turned off. To fold, unlock the folding mechanism, and bend the handlebar stem to hook the buckle on the rear mudguard. To open, press the trigger to remove from the buckle, erect the handlebar and lock the folding structure.



Carry

Hold the handlebar stem with either one hand or both hands to carry.

## 9. Daily Care and Maintenance

### Cleaning and storage

If you see stains on the scooter's body, wipe them off with a damp cloth. If the stains won't scrub off, put on some toothpaste, and brush them with a toothbrush, then wipe them off with a damp cloth.

Notes: do not clean the scooter with alcohol, gasoline, kerosene or other corrosive and volatile chemical solvents. Do not wash the scooter with a pressure washer. During cleaning, make sure that the scooter is turned off, the charging cable is unplugged, and the rubber flap is closed as water leakage may result in electric shock or other major problems.

When the scooter is not in use, keep it indoors where it is dry and cool. Do not store it outdoor for long time. Excessive sunlight, overheating and overcooling accelerate tire aging and compromise the scooter and the battery pack's lifespan.

### Battery maintenance

- 1 Use original battery packs, use of other models or brands may cause safety issues;
- 2 Do not touch the contacts. Do not dismantle or puncture the casing. Keep the contacts away from metal objects to prevent short circuit which may result in battery damage or even injuries and death.
- 3 Use original power adapter to avoid potential damage or fire;
- 4 Mishandling of used batteries may do tremendous harm to the environment. To protect natural environment, please follow local regulations to properly dispose used batteries.
- 5 After every use, fully charge the battery to prolong its lifespan.  
Do not place the battery in an environment where the ambient temperature is higher than 50°C or lower than -20°C (e.g., do not leave the scooter or the battery pack in a car under direct sunlight for an extended time). Do not throw the battery pack into fire as it may lead to battery failure, battery overheating, and even another fire. If the scooter is expected to be left idle for more than 30 days, please fully charge the battery and place it in a dry and cool place. Keep in mind to recharge it every 60 days to protect the battery from potential damage which is beyond limited warranty.  
Always charge before exhausting the battery to prolong the battery's lifespan. The battery pack performs better at normal temperature, and poor when it is below 0°C. For instance, when it is below -20°C, the riding range is only half or less at normal state. When the temperature rises, the riding range restores.

### Adjusting the disc brake



If the brake is too tight, use the M4 hexagon wrench to loosen the screws on the caliper, and slightly send back the brake cable to shorten the exposed length, then tighten the screws. If the brake is too loose, loosen the screws, and slightly pull out the brake cable to lengthen the exposed length, then tighten the screws.

*If you have any questions or require further information about our products, please call our service hotline, send us an e-mail or visit our website.*

***messingschlager***

**Messingschlager GmbH & Co. KG,  
Haßbergstraße 45  
96148 Baunach  
Germany**

**Tel: +49 (0)9544/944445  
mail: [kontakt@messingschlager.com](mailto:kontakt@messingschlager.com)  
[www.messingschlager.com](http://www.messingschlager.com)**

**EN**